

## BRIGGS & STRATTON Model Number Guide

| <b>1</b><br>1 OR 2 DIGITS<br>INDICATE<br>PISTON<br>DISPLACEMENT | <b>3</b><br>INDICATES<br>BASIC<br>DESIGN<br>SERIES | <b>9</b><br>INDICATES<br>-CRANKSHAFT POSITION<br>-CARBURETOR TYPE<br>-GOVERNOR TYPE                                    | <b>0</b><br>INDICATES<br>-TYPE OF BEARING<br>-REDUCTION GEARS AND<br>AUXILIARY DRIVES | <b>2</b><br>INDICATES<br>-TYPE OF STARTER             |
|---|--|--|---|---|
| 6   | 0  | 0—Horizontal shaft diaphragm carburetor (SG) pneumatic governor  | 0—Plain bearing, non-flange mount   | 0—Without starter                                     |
| 8   | 1  |  |   | 1—Rope starter  |
| 9   | 2  |  | 1—Plain bearing, flange bearing   | 2—Rewind starter                                      |
| 10  | 3  | 1—Horizontal shaft diaphragm carburetor (VJ) pneumatic governor  | 2—Sleeve bearing flange mounting splash lube  | 3—Electric starter only<br>120 volt gear drive        |
| 11  | 4  |  | 3—Ball bearing flange mount splash lube   | 4—Electric starter only<br>12 volt belt drive         |
| 12  | 5  | 2—Horizontal shaft diaphragm carburetor (PJ) pneumatic or mechanical governor  | 4—Ball bearing, flange mounting pressure lubrication                                  | 5—Electric starter only<br>12 volt gear drive         |
| 13  | 6  |  | 5—Plain bearing gear reduction (6 to 1) CCW rotation                                  | 6—Alternator only                                     |
| 16  | 7  | 3—Horizontal shaft float feed carburetor pneumatic governor  | 6—Plain bearing gear reduction  | 7—Electric starter 12 volt gear drive with alternator |
| 17  | 8  | 4—Horizontal shaft float feed carburetor mechanical governor   | 7—Plain bearing mower deck mounting pressure lubrication                              | 8—Vertical pull start or side pull starter            |
| 19  | 9  | 5—Vertical shaft diaphragm carburetor (VJ) pneumatic governor  | 8—Plain bearing (PTO) perpendicular to crankshaft                                     |   |
| 22  | A  | 6—Open   | 9—Plain bearing auxiliary drive parallel to crankshaft                                |   |
| 23  | B  | 7—Vertical shaft float feed carburetor mechanical governor   |   |   |
| 24  | C  | 8—Vertical shaft float feed carburetor module fuel tank mechanical governor  |   |   |
| 25  | D  | 9—Vertical shaft model 13 Pulsa Jet carburetor mechanical governor model 9, Prime-N-Pull carburetor pneumatic governor |   |   |
| 28  | E  |  |   |   |
| 29  | F  |  |   |   |
| 30  | G  |  |   |   |
| 32  | H  |  |   |   |
| 35  | I  |  |   |   |
| 40  | J  |  |   |   |
| 42  | K  |  |   |   |
|   | L  |  |   |   |
|   | M  |  |   |   |
|   | N  |  |   |   |
|   | O  |  |   |   |
|   | P  |  |   |   |
|   | Q  |  |   |   |

(1) Digit 6 formerly used for "Wind-up" Starter on: 60000, 80000 & 92000 series.

## Tecumseh Model Number Guide

(EXAMPLE) 8 0 4 1 0 1 A

| 1st DIGIT                      | 2nd & 3rd DIGIT   | 4th DIGIT   | 5th & 6th DIGIT  | 7th DIGIT       |
|--------------------------------|---|---|--|-----------------|
| CRANKSHAFT POSITION            | HORSEPOWER OR 2-CYCLE   | PRIMARY FEATURES  | ENGINE VARIATION NUMBER  | REVISION LETTER |
| 8 - Vertical<br>9 - Horizontal | 00 = 2 Cycle<br>02 = 3 HP<br>03 = 3.5 HP<br>04 = 4 HP<br>05 = 5 HP<br>06 = 6 HP<br>07 = 7 HP<br>08 = 8 HP<br>10 = 10 HP<br>12 = 12 HP<br>14 = 14 HP<br>16 = 16 HP<br>18 = 18 HP | 1 = Rotary Mower<br>2 = Industrial<br>3 = Snow King<br>4 = Minibike<br>5 = Tractor<br>6 = Tiller<br>7 = Rider | 00 thru 99<br>00 thru 99<br>00 thru 99<br>00 thru 99<br>00 thru 99<br>00 thru 99<br>00 thru 99 |                 |