

BATTERY QUICK REFERENCE

PART #	REFERENCE #	LENGTH	WIDTH	HEIGHT	POLARITY	BATTERY TYPE	TERMINAL TYPE	CHARGE AMPS
625-4807	12N7D-3B	5-5/16"	3"	5-15/16"	Right Hand Positive	Conventional	5	0.7
625-4709	Y50-N18A-A	8-1/8"	3-9/16"	6-15/16"	Right Hand Negative	Yumicron	3	2.0
625-4901	YB10A-A2	5-5/16"	3-9/16"	6-1/8"	Right Hand Negative	Yumicron	6	1.1
625-4505	YB10L-B	5-5/16"	3-9/16"	5-3/4"	Right Hand Positive	Yumicron	5	1.1
625-4517	YB12A-A	5-5/16"	3-9/16"	6-15/16"	Right Hand Negative	Yumicron	5	1.2
625-4801	YB12C-A	5-5/16"	3-9/16"	6-7/8"	Right Hand Negative	Yumicron	3	1.2
625-4805	YB14A-A1	5-5/16"	3-1/2"	6-15/16"	Right Hand Negative	Yumicron	5	1.4
625-4905	YB14A-A2	5-5/16"	3-1/2"	6-15/16"	Right Hand Negative	Yumicron	6	1.4
625-4906	YB14L-A2	5-5/16"	3-1/2"	6-9/16"	Right Hand Positive	Yumicron	6	1.4
625-4503	YB16CL-B	6-7/8"	4"	6-7/8"	Right Hand Positive	Yumicron	4	1.9
625-4917	YB30L-B	6-5/8"	5-3/16"	6-15/16"	Right Hand Positive	Yumicron	4	3.0
625-4903	YB9A-A	5-5/16"	3"	6-1/8"	Right Hand Negative	Yumicron	5	0.9
625-4525	YB9L-A2	5-5/16"	3"	5-1/2"	Right Hand Positive	Yumicron	2	0.9
625-4915	YT4L-BS	4-3/8"	2-5/8"	3-3/8"	Right Hand Positive	Sealed	4	0.4
625-4907	YTX12-BS	6"	3-7/16"	5-1/8"	Right Hand Negative	Sealed	4	1.2
625-4911	YTX14AH-BS	5-5/16"	3-1/2"	6-9/16"	Right Hand Negative	Sealed	3	1.2
625-4909	YTX14-BS	3"	3-7/16"	5-3/4"	Right Hand Negative	Sealed	4	1.4
625-4919	YTX15L-BS	6-7/8"	5-7/16"	5-1/8"	Right Hand Positive	Sealed	3	1.3
625-4715	YTX16-BS	6"	3-7/16"	6-3/8"	Right Hand Negative	Sealed	3	1.4
625-4707	YTX16-BS-1	6"	3-7/16"	6-3/8"	Right Hand Negative	Sealed	1	1.4
625-4811	YTX20L-BS	6-7/8"	3-7/16"	6-1/8"	Right Hand Positive	Sealed	3	1.8
625-4713	YTX5L-BS	4-1/2"	2-13/16"	4-3/16"	Right Hand Positive	Sealed	4	0.5
625-4303	YTX9-BS	6"	3-7/16"	4-3/16"	Right Hand Negative	Sealed	4	0.9

Proper Battery Maintenance

1. Never allow battery to stand in discharged condition.
2. If necessary, charge battery once a month with our universal battery charger (part # 625-0901).
3. Keep battery clean, dry and free of dirt. Clean battery terminals to prevent corrosion.
4. Inspect vent tube, ensuring that it is not bent, twisted or clogged.
5. Check cables, terminals and case for obvious damage or loose connections.
6. Always keep the acid level between lower and upper lines on conventional batteries.

Terminal Shape			
Type	Front	Side	Top
1			
2			
3			
4			
5			
6			

